

# DaimlerChrysler Corporation

Concorde : Intrepid : LHS : New Yorker (1994-96) : Vision : 300M

# 1

## SYSTEM INDEX

<b>MAINTENANCE</b> .....	1-8
<b>CHARGING</b> .....	1-8
<b>STARTING</b> .....	1-8
<b>CRUISE CONTROL</b> .....	1-8
<b>IGNITION</b> .....	1-9
<b>EMISSIONS</b> .....	1-9
<b>FUEL</b> .....	1-9
<b>EXHAUST</b> .....	1-10
<b>ENGINE COOLING</b> .....	1-10
<b>ENGINE</b> .....	1-10
<b>Assembly</b> .....	1-10
<b>Cylinder Head</b> .....	1-11
<b>Camshaft</b> .....	1-12
<b>Crank &amp; Pistons</b> .....	1-12
<b>Engine Lubrication</b> .....	1-12
<b>AUTO TRANSAXLE</b> .....	1-12
<b>SHIFT LINKAGE</b> .....	1-13
<b>DRIVELINE</b> .....	1-13
<b>BRAKES</b> .....	1-13
<b>FRONT SUSPENSION</b> .....	1-14
<b>REAR SUSPENSION</b> .....	1-14
<b>STEERING</b> .....	1-14
<b>HEATING &amp; AC</b> .....	1-15
<b>WIPERS &amp; SPEEDOMETER</b> ..	1-15
<b>LAMPS &amp; SWITCHES</b> .....	1-15
<b>BODY</b> .....	1-16

## OPERATIONS INDEX

<b>A</b>	
Air Bags .....	1-14
Air Conditioning .....	1-15
Alternator (Generator) .....	1-8
Antenna .....	1-15
<b>B</b>	
Battery Cables .....	1-8
Bearings, Con. Rod .....	1-12
Bearings, Front Wheel .....	1-14
Bearings, Main .....	1-12
Bearings, Rear Wheel .....	1-14
Belt/Chain, Timing .....	1-8
Brake, Disc .....	1-13
Brake, Drum .....	1-13
Brake, Hose .....	1-13
Brake, Parking .....	1-14
Brakes, Anti-Lock .....	1-13
<b>C</b>	
Cables, Battery .....	1-8
Cables, Spark Plug .....	1-9
Camshaft .....	1-12
Catalytic Converter .....	1-10
Coil, Ignition .....	1-9
Compression Test .....	1-11
Compressor, AC .....	1-15
Connecting Rods .....	1-12
Control Arms, Front .....	1-14
Control Arms, Rear .....	1-14
Cooling, Engine .....	1-10

Crankshaft .....	1-12
Cruise Control .....	1-8
CV Joint .....	1-13

## D

Disc Brakes .....	1-13
Drive Belts .....	1-8

## E

Engine .....	1-10
Engine Lubrication .....	1-12
Engine Mounts .....	1-11
Exhaust .....	1-10
Exhaust Manifolds .....	1-10
Exhaust Pipes .....	1-10

## F

Filter, Oil .....	1-8
Freeze Plugs .....	1-10
Front End Alignment .....	1-14
Front Suspension .....	1-14
Fuel Injection .....	1-9
Fuel Pump .....	1-9
Fuel Tank .....	1-9

## G

Gearshift Linkage .....	1-13
-------------------------	------

## H

Halfshaft .....	1-13
Headlight .....	1-16
Headlamp Switch .....	1-16
Heater .....	1-15
Horn .....	1-16
Hose, AC .....	1-15
Hose, Brake .....	1-13
Hose, Radiator .....	1-10
Hose, Power Steering .....	1-15

## I

Ignition .....	1-9
Ignition Cables .....	1-9
Ignition Coil .....	1-9
Ignition Switch .....	1-9
Intake Manifold .....	1-9

## L

Lamps, Parking .....	1-16
Lights, Head .....	1-16
Linkage, Shift .....	1-13
Lock, Hood .....	1-16

## M

Main Bearings .....	1-12
Maintenance .....	1-8
Manifold, Exhaust .....	1-10
Manifold, Intake .....	1-9
Motor, Window Reg. .....	1-16
Muffler .....	1-10

## O

Oil Filter .....	1-8
Oil Pump .....	1-12

## P

Parking Brake .....	1-14
Parking Lamp .....	1-16

Pistons .....	1-12
Piston Rings .....	1-12
Power Steering .....	1-14

## R

Radiator .....	1-10
Radiator Hose .....	1-10
Radio .....	1-15
Rear Suspension .....	1-14
Regulators, Window .....	1-16
Rod Bearings .....	1-12

## S

Shift Linkage .....	1-13
Shock Absorber, Front .....	1-14
Shock Absorber, Rear .....	1-14
Spark Plugs .....	1-9
Speedometer .....	1-15
Springs, Front .....	1-14
Springs, Rear .....	1-14
Stabilizer Bar .....	1-14
Starter .....	1-8
Steering, Power .....	1-14
Suspension, Front .....	1-14
Suspension, Rear .....	1-14
Switch, Backup .....	1-15
Switch, Dimmer .....	1-16
Switch, Headlight .....	1-16
Switch, Ignition .....	1-9
Switch, Stoplight .....	1-16
Switch, Turn Signal .....	1-16

## T

Tappets, Valve .....	1-11
Thermostat .....	1-10
Timing Belt .....	1-8
Timing Chain .....	1-8
Tune-Up .....	1-8

## V

Valve Lifters .....	1-11
Valves .....	1-11

## W

Water Pump .....	1-10
Wheel Cylinders .....	1-13
Wheels .....	1-14
Windshield Wipers .....	1-15
Window Regulators .....	1-16

## 1-8

## DAIMLERCHRYSLER CORPORATION

CONCORDE : INTREPID : LHS : NEW YORKER (1994-96) : VISION : 300M

	LABOR TIME	SEVERE SERVICE		LABOR TIME	SEVERE SERVICE		LABOR TIME	SEVERE SERVICE
<b>MAINTENANCE</b>			<b>Timing Belt/Chain, Replace (B)</b>			<b>CHARGING</b>		
<b>Air Cleaner Filter Element, Replace (B)</b>			2.7L (3.2) .....	4.8	5.2	<b>Generator Circuits, Test (B)</b>		
1993-04 (.2) .....	.3	.3	3.2L (1.4) .....	2.1	2.3	Includes: Test component output.		
<b>Battery and Cable Terminals, Clean (C)</b>			3.3L (2.7) .....	4.1	4.5	1993-02 (.4) .....	.6	.6
1993-02 .....	.2	.2	3.5L			<b>Generator, R&amp;R and Recondition (B)</b>		
<b>Chassis Lubrication (C)</b>			1993-97 (2.1) .....	3.1	3.4	1993-96		
Includes: Correct all fluid levels.			1998-04 (1.4) .....	2.1	2.4	3.3L, 3.5L (1.2) .....	1.6	1.8
1993-02 .....	.1	.1	w/AC 93-97 add .....	.3	.3	<b>Generator Assy., Replace (B)</b>		
<b>Chassis Lubrication, Change Oil &amp; Filter (C)</b>			<b>Tires, Rotate (C)</b>			Includes: Pulley transfer.		
Includes: Correct all fluid levels.			1993-04 (.4) .....	.6	.7	2.7L (1.1) .....	1.7	1.9
1993-02 .....	.3	.3	<b>Tune-Up (B)</b>			3.2L (.9) .....	1.4	1.5
<b>Cooling System Seasonal Service (B)</b>			Includes: Clean battery and cable connections, test battery, check intake and exhaust manifold mounting nuts/bolts, tighten to specs, check engine compression, replace spark plugs, test resistance of spark plug cables, replace as required, inspect distributor cap and rotor, if equipped, check vacuum advance operation, check base ignition timing and idle speed, service air cleaner element, inspect crankcase ventilation system and emission controls, inspect and adjust all drive belts.			3.3L (.3) .....	.5	.6
Includes: Pressure test system, inspect hoses and tighten all connections, drain radiator and engine block, flush system, refill system with proper coolant mix.			1993-02 .....	1.5	1.7	3.5L		
1993-02 .....	.5	.7	<b>SCHEDULED MAINTENANCE INTERVALS</b>			1993-97 (.4) .....	.6	.7
Coolant (5) .....	.7	.9	<i>If necessary, refer to the appropriate Chilton Service Manual for scheduled maintenance service interval operations.</i>			1998-04 (.9) .....	1.4	1.5
<b>Coolant Thermostat, Replace (B)</b>			<b>7500 Mile Service (C)</b>			<b>STARTING</b>		
1993-97 (.5) .....	.7	.8	All Models .....	.7	.7	<b>Starter Draw Test (On Vehicle) (B)</b>		
1998-04			<b>15000 Mile Service (C)</b>			1993-02 (.2) .....	.3	.3
2.7L (1.5) .....	2.0	2.0	All Models .....	1.1	1.1	<b>Battery and Cable Terminals, Clean (C)</b>		
3.2L, 3.5L (1.0) .....	1.4	1.4	<b>22500 Mile Service (C)</b>			1993-02 .....	.2	.3
<b>Fuel Filter, Replace (B)</b>			All Models .....	.8	.8	<b>Battery Cables, Replace (C)</b>		
1993-97			<b>30000 Mile Service (B)</b>			Positive (.5) .....	.8	.9
in line (.3) .....	.5	.6	All Models .....	1.5	1.5	Negative (.3) .....	.5	.5
in tank (.8) .....	1.1	1.2	<b>37500 Mile Service (C)</b>			<b>Battery, Replace (C)</b>		
1998-04			All Models .....	.7	.7	All Models (.4) .....	.6	.7
filter/regulator (.9) ..	1.2	1.3	<b>45000 Mile Service (B)</b>			<b>Starter, R&amp;R and Recondition (B)</b>		
in tank (.8) .....	1.1	1.2	All Models .....	1.3	1.3	1993-96 (1.1) .....	1.5	1.7
w/rear sway bar add .....	.3	.3	<b>52500 Mile Service (C)</b>			<b>Starter Assy., Replace (B)</b>		
<b>Halogen Headlight Bulb, Replace (C)</b>			All Models .....	1.0	1.0	1993-97 (.6) .....	.8	.9
1993-97 (.2) .....	.3	.3	<b>60000 Mile Service (B)</b>			1998-03		
1998-03			All Models .....	3.4	3.4	2.7L (.6) .....	.8	.9
300M, LHS (.4) .....	.6	.6	<b>67500 Mile Service (C)</b>			3.2L, 3.5L (.8) .....	1.1	1.2
Concorde			All Models .....	.8	.8	2004		
2.7L high/left (.2) .....	.3	.3	<b>75000 Mile Service (C)</b>			2.7L, 3.5L (.8) .....	1.2	1.2
high beam (.4) .....	.6	.6	All Models .....	.9	.9	<b>Starter Drive Assy., Replace (B)</b>		
low beam (.4) .....	.6	.6	<b>82500 Mile Service (C)</b>			Includes: Starter R&R.		
Intrepid (.2) .....	.3	.3	All Models .....	1.0	1.0	1993-96 (1.0) .....	1.4	1.5
2004 (.2) .....	.3	.3	<b>90000 Mile Service (B)</b>			<b>Starter Relay, Replace (B)</b>		
<b>Oil and Filter, Change (C)</b>			All Models .....	2.4	2.4	1993-04 (.2) .....	.3	.3
Includes: Correct all fluid levels.			<b>97500 Mile Service (C)</b>			<b>Starter Solenoid and/or Switch, Replace (B)</b>		
1993-04 (.2) .....	.3	.3	All Models .....	.7	.7	Includes Starter R&R.		
<b>Radiator Hoses, Replace (B)</b>			<b>CRUISE CONTROL</b>			1993-96 (1.0) .....	1.4	1.4
Includes Refill with proper coolant mix.			<b>Diagnose Cruise Control System (A)</b>					
1993-97			1993-02 .....	.6	.6	<b>Control Chain, Cable or Rod, Replace (B)</b>		
upper (.4) .....	.6	.6	<b>Control Relay, Replace (B)</b>			1993-97 (.3) .....	.5	.5
lower (.5) .....	.7	.7	1998-02			1998-02		
water pump to intake (.5) ..	.7	.7	300M, LHS (.3) .....	.5	.5	300M, LHS (.3) .....	.5	.5
1998-04 each (.5) .....	.7	.7	Concorde, Intrepid (.6) ..	.9	1.0	Concorde, Intrepid (.6) ..	.9	1.0
<b>Drive Belt, Replace (B)</b>			2003-04 (.3) .....	.5	.5	2003-04 (.3) .....	.5	.5
A/C compressor (.4) .....	.6	.7	<b>Control Relay, Replace (B)</b>			1993-97 (.2) .....	.3	.3
Serpentine (.3) .....	.5	.5						

